

# Please find enclosed your new Standard or MyStar remote control.

To ensure your new remote control works with your set top box, you will need to follow these simple steps.

## Step 1

Identify your set top box from the images shown here and tick the box.

☐

Omega

☐

TITAN, FLINDERS

☐

MyStar

☐

MyStar HD

## Step 2

Programming your new remote control.

**If you have an Omega, TITAN or FLINDERS set top box (identified above):**

1. Turn over your new remote control and remove the battery panel on the back.
2. Locate the small switch within the battery panel (see figure 1, the bottom of the battery panel).
3. If you have an Omega set top box, using a pen ensure the switch is set to "A" or if you have a TITAN, FLINDERS set top box, ensure the switch is set to "B".
4. Replace your battery cover.



Figure 1

**If you have a MyStar or MyStar HD set top box, your remote is all ready to go.**

## If you have a Foxtel or MyStar remote..



- 1 Power ON/Standby (switches between on and standby mode).
- 2 If you are in any application, this button returns you to normal TV viewing.
- 3 Launches AIR – Foxtel Interactive Radio – over 30 uninterrupted digital radio channels.
- 4 Launches the on-screen TV Guide.
- 5 Launches 'Planner' where you can find the programs that you have recorded or booked to record, and any reminders that you've set.
- 6 Launches the ACTIVE menu for our range of interactive services.
- 7 Launches Box Office, where you can view what movies are showing and coming up.
- 8 Launches the 'SET UP' menu where you can customise your settings.
- 9 Pressing this button while watching TV launches the iSearch Banner where you can obtain more specific program information. When is again pressed it will launch the iBox which provides a more detailed program description.
- 10 Use these buttons to increase/decrease volume.
- 11 Use these buttons to move up or down through the channels.
- 12 Use these buttons to help you navigate through the on-screen menus.
- 13 Allows you to confirm a choice or make a selection.
- 14 Turns the sound on or off.
- 15 Press this button while watching TV to take you back to the last TV channel you were watching.
- 16 This button takes you to the ACTIVE menu, where you can access the on-screen help options.
- 17 Use to select the matching colour options shown on-screen.
- 18 These can change channels accordingly (e.g. for channel 501 press 5 then 0 and then 1 in quick succession). If in an Interactive TV application these buttons will have varying functionality.

## ..or Standard Remote Control



### Additional buttons for MyStar and MyStar HD

- 19 This button pauses the program you are watching or starts a 'Live Pause' recording.
- 20 This button plays a recorded program you are watching.
- 21 This button rewinds the program you are watching.
- 22 This button fast forwards the program you are watching.
- 23 This button records the program.
- 24 This button stops playback of the recorded program or exits to live TV.